

HD Mini key chain Camera

Model: DV087



User Manual

Important Notice

- Please ensure that you read the complete user manual carefully before using any part of the product.
- Keep this copy safe for future reference in case of operational difficulties.

 
Conbrov[®]

Safety Instructions

Please read the following instructions before using the camera:

- The camera should be used for legal purpose only. Check and follow the laws provided in your country regarding the use of camera and other video recording devices.
 - The Mini Cam is NOT waterproof or dustproof, so don't use it outdoors, in adverse environments or during rain.
 - In order to avoid any damage to the device, the risk of electric shock to you or starting a fire, use original DC power-supply.
 - You are forbidden from doing any unauthorized disassembling or dismantlement of this device, or replacement of its parts. The device's manufacturer will not take responsibility or pay liabilities for any loss caused by such actions.
 - To avoid explosions, damages or bodily injuries, never put this device into an oven, microwave oven or direct fire.
 - Owing to version changes, this user manual may vary a little from our real product currently on the market. In such a case, please take the standard to be the real product.
- By following the above safety instructions, we hope that it will be enjoyable to own and use this product!

Product Structure

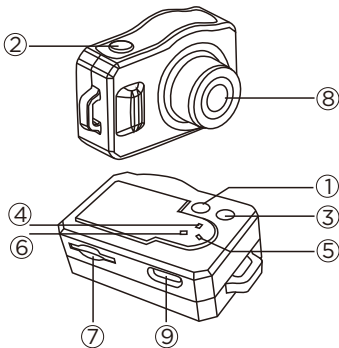


- 1.Power Button
- 2.OK Button
- 3.Mode Button
- 4.Video and photo Indicator
- 5.Voice Recording Indicator
- 6.Motion Detection Indicator
- 7.Micro SD card slot
- 8.Camera Lens
- 9.Mini USB port

Quick Guide

1. Charge the camera.

Use the provided USB cable to charge the camera by Computer or AC adaptor (5v 1-2A)

 During charging, three indicator will flash. All indicators will be on when the camera fully charged.

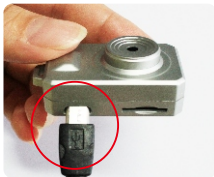

2. Insert the Micro SD card.



Quick Guide

3. Power on the camera.

Hold on the Power button to power on the camera. When the Blue indicator is always on, the camera enters into standby mode. Hold on the power button for 3 second to power off the camera.



4. Taking video

Hold on OK button to take videos, the Blue indicator will flash slowly. Another press to stop the recording.



Quick Guide

5. Taking Photo.

Short press on OK button to take one photo.

The blue indicator will flash once after taking one photo.



6. Voice recording.

Short press on Mode button to switch into Voice recording mode.

The Green indicator will be on.

Short press on OK button to start voice recording.

The Green indicator will flash slowly.



Quick Guide

7. Motion detection.

 
Short press on Mode button to switch into Motion detection standby mode.

The Red indicator will be on.

Short press on OK button to enter into Motion detection mode.

The Red indicator will flash slowly.

When there's a motion, the Red indicator will flash quickly and then goes off

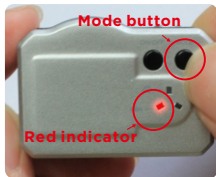

Important notice:

- The activated motion is about 2 minutes per file.
- When there's no more motion, the camera will be back into motion detection standby mode. The Red indicator will flash slowly.

Special function:

 
1.Time setting.

-Insert Micro SD card into the camera ,and connect it to your computer, find a text file: TAG.TXT under the root directory.

-2011-01-0123:59:59

-Open TAG.TXT, modify the date and time exactly according to file and format.

-Reboot the camera to enable the updated date and time.



2.PC Camera

 
Connect the camera to computer using the provided USB cable.Press any button to switch it into PC camera mode.



Special function:

3.Reset Camera

Hold on the Power and Mode button for 5 seconds to reset the camera.

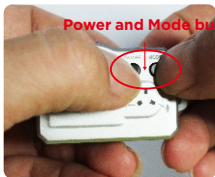

Important Notice:

- When you connect the camera to your computer, if the camera cannot be identified, please try to connect again.
- It is suggested to copy the video files into computer for a smoothly playback.

Product accessory

- 1 x DV087 Mini Cam
- 1 x user manual
- 1 x USB cable
- 1 x lanyard

It is important to note that:

If there is anything missing in your product package and it is not included in the above list of accessories, contact us as soon as possible at: support@conbrov.com

Specification

Camera size	1.35 x0.9 x0.6in
Video file format	AVI
Photo file format	JPEG
Voice file format	WAV
Camera resolution	720x480 @ 30fps
USB type	Mini 5 Pin
Camera memory storage	Micro-SD up to 32GB
Battery type	High capacity Li-battery
Motion detection distance	6-8M / 18-24 feet
Video file size	25M/min

Indicator Status and their meanings	
Recording Standby	Blue light on
Recording	Blue light flash slowly
Photo taken standby	Blue light on
Photo taken	Blue light flash once
Audio recording standby	Green light on
Audio recording	Green light flash slowly
Motion detection standby	Red light on
Motion detection	Red light flash slowly and then off
Charging	Three light flash alternately
Fully charged	Three lights on