

CAR CAMCORDER

MODEL NO: T36



USER MANUAL


- Please ensure that you read the complete user manual carefully before using any part of the product.
- Keep this copy safe for future reference in case of operational difficulties.

Safety Instructions

- The camera should be used for legal purpose only. Check and follow the laws provided in your country regarding the use of camera and other video recording devices.
- The Car Camera is NOT waterproof or dustproof, so don't use it outdoors, in adverse environments or during rain.
- In order to avoid any damage to the device, the risk of electric shock to you or starting a fire, use original DC power supply.
- You are forbidden from doing any unauthorized disassembling or dismantlement of this device, or replacement of its parts. The device's manufacturer will not take responsibility or pay liabilities for any loss caused by such actions.
- To avoid explosions, damages or bodily injuries, never put this device into an oven, microwave oven or direct fire.
- Owing to version changes, this user manual may vary a little from our real product currently on the market. In such a case, please take the standard to be the real product.
- By following the above safety instructions, we hope that it will be enjoyable to own and use this product!

Installation

- Insert suction mount into the mount clip on the camera.
- Fix the camera on windshield where the vision is not blocked (Place close to rear-view mirror is recommended)
- Connect the camera with power cord. Adjust the suction mount and the camera direction to get the best view angle.
- Pls do not install the camera on airbag or any part block the driving and vision

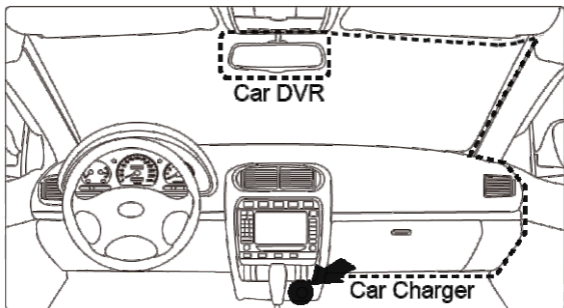

Quick Guide

1. Insert a Formatted Micro SD card



2. Insert the Car adapter to the Camera Mini USB port



3. Plug the adapter into your car cigarette charger and power the car engine



Product structure



1. Mini USB port

2. Mount clip

3. Power Button

4. Record Button

5. HDMI Port

6. Menu Button

7. Page up Button

8. Page down Button

9. Mode Button

10. Microphone

11. Micro SD Slot

12. Reset

13. LED indicator

It is important to note that:

If there is anything missing in your product package and it is not included in the above list of accessories, contact us as soon as possible at: support@conbrov.com

Button Functions

Mode Button : Switch between video recording/photo taking and play back mode.

Menu Button : Enter and exit the setting menu.

Page up Button :

1. choose functions in menu mode.
2. choose files in playback mode.
3. Fast forward in playing mode.
4. Turn on/off the screen in video recording mode.

Page down Button :

1. choose functions in menu mode.
2. choose files in playback mode.
3. Fast rewind in playing mode.
4. Turn on/off microphone in video recording mode.

Record Button :

1. Press to record in video recording mode.
2. Press to take photos in Photo taking mode.
3. Confirm function settings in menu mode.
4. Play or pause the video in playing mode.

Reset Button : Reboot the camera to default setting

Power Button : 1. Turn on/off the camera.


1. Short press to lock the current recording video

Important Notice:

- * Automatically default as loop recording for this camera.
- * Charge the camera at least 8 hours before first use to prolong the battery life.
- * Only 5V input can be used for charging the camera.
- * Please use high quality Micro SD card that meets the SDHC specifications and fits for recording devices. (8G-32G, Class 10 or higher)
- * Format new micro sd card on the camera before use it.

Quick Guide

1. Power on and off :

- Short press  power button to power on the camera and the red and green indicators will be ON..


2. Charging the camera :

- Connect the camera with the provided power cable adapter

3. Install and remove memory card :

- Insert Micro sd card properly and format it before use.
- Low quality memory cards may cause reading error.
- Make sure to stop recording before removing the memory card to avoid card damage or video errors.

4. Taking Videos :

- Press Record button to start recording, “  ” icon blinks on the topper screen, repress Record button again to stop recording.

5. Taking photos :

- Press Mode button to switch into Photo taking mode, and Press Record button to take one photo.

6. Playback the videos and photos :

- Press Mode button to switch into playback mode, and Press Page up or Page down to select the right file and then Press Record button to choose the file and another press on Record button to playback it.

Menu Instruction

Video quality: Video resolution: 1920x1080 30p, 1280x720P30

Date stamp: Add date and time stamp in the video

Record time: 1/2/3 minutes per file

Microphone : On / Off Setting

LCD auto screen off: off /1/3 Minutes.

Motion detection : On / off

G-Sensor : 2 / 4/ 8 G or OFF

Volume : Adjust the volume

Language: Choose Language

Light Frequency: 50Hz or 60Hz

AE bias: Adjust the exposure

Time setting: Set time and date.

Use Page Up and Page Down button to select, press Mode button to enter next item, press Record button to confirm..

Format: Format Micro SD card

Product Parameters

Light sensor	CMOS sensor, 1/3" light sensation area, low light
Lens	Fixed focus, F = 2.0, Full glass
CPU	Ambarella A7
LCD	3 inch 16:9 TFT LCD
Audio	Built-in high sensitivity microphone/speaker
External Memory	standard micro SD card SDHC specification (up to 32G)
Gravity sensor	Sensitivity 2g/4g/8g/OFF
Manual Lock	Emergency recording support
Motion detect	ON/OFF
WDR	Wide Dynamic Range setting
White balance	Auto
Exposure	Smart AE/Auto ISO
TV interface	HDMI
Battery	500mAh 3.7V rechargeable lithium battery
Video format	MP4
Video resolution	1920x1080P30, 1280x720P30
Language	Simplified Chinese, Traditional Chinese, English, Russian
USB	Mini USB
Loop recording	default
Auto screen off	OFF/1 min/3 min
Manual screen off	ON/OFF
Microphone mute	ON/OFF